

lakeland

FARM & RANCH DIRECT

Lakeland Small Portable Calf Chute with Weigh Scale User Guide

Model #: NSCC-2



Congratulations on your purchase of the Lakeland Small Portable Calf Chute with Weigh Scale and thank you for your business! This user guide will provide you with all the information you need to effectively operate and maintain your new equipment.

Table of Contents:

1. Introduction
2. Safety Precautions
3. Assembly Instructions
4. Operating Instructions
5. Troubleshooting
6. Warranty Information

Lakeland Farm and Ranch Direct

- 1. Introduction:** The Lakeland Small Portable Calf Chute with Weigh Scale is a versatile piece of equipment that allows for efficient handling and weighing of calves. It is designed to be easily transported and set up, making it ideal for various handling operations.
- 2. Safety Precautions:** Before using the calf chute, it is essential to follow these safety precautions to prevent accidents or injuries:
 - Ensure the chute is set up on a flat and stable surface.
 - Keep all body parts clear of moving parts during operation.
 - Do not exceed the maximum weight capacity of 150lbs, specified by the manufacturer.
 - Only use the calf chute for its intended purpose.
- 3. Assembly Instructions:** Follow these steps to assemble your Lakeland Small Portable Calf Chute with Weigh Scale:

Step 1: Unpack all components from the packaging and inside the chute.

Step 2: Unscrew the transport lock, to enable the chute to move freely.



Step 3: Attach the 2 steel hooks to the Dial Scale head (1 on top and 1 on bottom), ensuring the smaller loop/hook is at the top.

Step 4: Lift the scale handle up (black handle located at side of chute), connect the bottom hook of the Dial Scale head to the welded loop on the handle.

Step 5: Connect the top hook of the Dial Scale head to the welded loop by the transport lock (you may need to lift the chute/cage up a bit get the hook into the loop). Your weigh scale is now installed!



NOTE: When the Dial Scale head is attached to calf scale the dial scale will not read 0 Kg/Lbs, as it is pre-calibrated for this calf scale.

Step 6: To check Dial Scale is at zero, pull down on scale handle and scale should read close to zero. Scale handle must be pressed down to check zero.



Step 7: To zero Dial Scale, release the scale handle and adjust the adjustment screw on top of the Dial. Then press down on scale handle to check zero.



Step 8: Install Anti-back up handle. Insert handle into square tubing and secure with bolt/nut. Ensure ratchet handle is facing towards front of chute.



Installation of wheels & front tow bar

(Wheels can remain on or off for operation, however for more accurate weight we recommend taking wheels off)

Step 8: Lift side of calf chute up, insert/slide in wheel axle into square tubing at rear on both sides. Tighten lock nut to secure. Complete for both wheels/sides.



Step 9: Lift front of calf chute and insert/slide in tow bar at front. Tighten lock nut to secure.



Operating Instructions: To use your calf chute & weigh scale effectively, follow these steps:

Step 1: Lead the calf into the rear of the chute using gentle guiding techniques.

Step 2: Secure the calf in place by securing their head in the headgate.

Step 3: Use the side scale handle to operate the weigh scale and record accurate weight measurements.

Step 4: Once finished handling the animal, release the headgate and allow the calf to exit the rear of the chute safely.

Troubleshooting: If you encounter any issues with your calf chute or scale please don't hesitate to reach out to us at Lakeland Farm & Ranch by calling toll-free 1-866-443-744 or refer to this troubleshooting section for possible solutions:

Issue: The chute will not move freely. Solution: Check Transport Lock screw is released before operating scale.

Issue: The weigh scale is not displaying accurate measurements. Solution: Calibrate the weigh scale according to the manufacturer's instructions. Ensure it is on a level surface during calibration.

Warranty Information: The Lakeland Small Portable Calf Chute with Weigh Scale comes with a 5 Year warranty. For detailed warranty terms and conditions, refer to the warranty card provided with your purchase.

We hope this user guide has provided you with all the necessary information to operate your Lakeland Small Portable Calf Chute with Weigh Scale effectively.

If you have any further questions or require additional assistance, please contact our customer support team at toll-free 1-866-443-7444.