

## UTV Calf Catcher Sizing Guide

**(A)** Measure the length from the front of the front bumper to the center of the rear ball. The simplest method to get this dimension is as follows;

1. Back the UTV against a wall.
2. Measure from the wall to the front of the front bumper.
3. Measure from the wall to the center of the rear ball.
4. Subtract dimension 3 from dimension 2. This gives you the dimension needed.

This model fits from 106 9/16" to 118 1/16".

**(B)** Measure from the ground to the center of the rear ball.

This model fits from 10 5/8" to 15 5/8".

**(C)** Measure from the ground to the bottom of the front bumper.


This model fits from 17 1/4" to 23 1/8".

**(D)** Measure the width of the UTV and divide by 2.

This model fits UTV's up to 64" wide.

**(E)** Measure the width of the UTV and divide by 2. Add this dimension to 98 1/4" and you have the total width of the EZE-Catcher attached to the UTV. Good for checking if it fits through fence line gates.

Custom hitches can be made for UTV's that do not fit within these standard model dimensions.

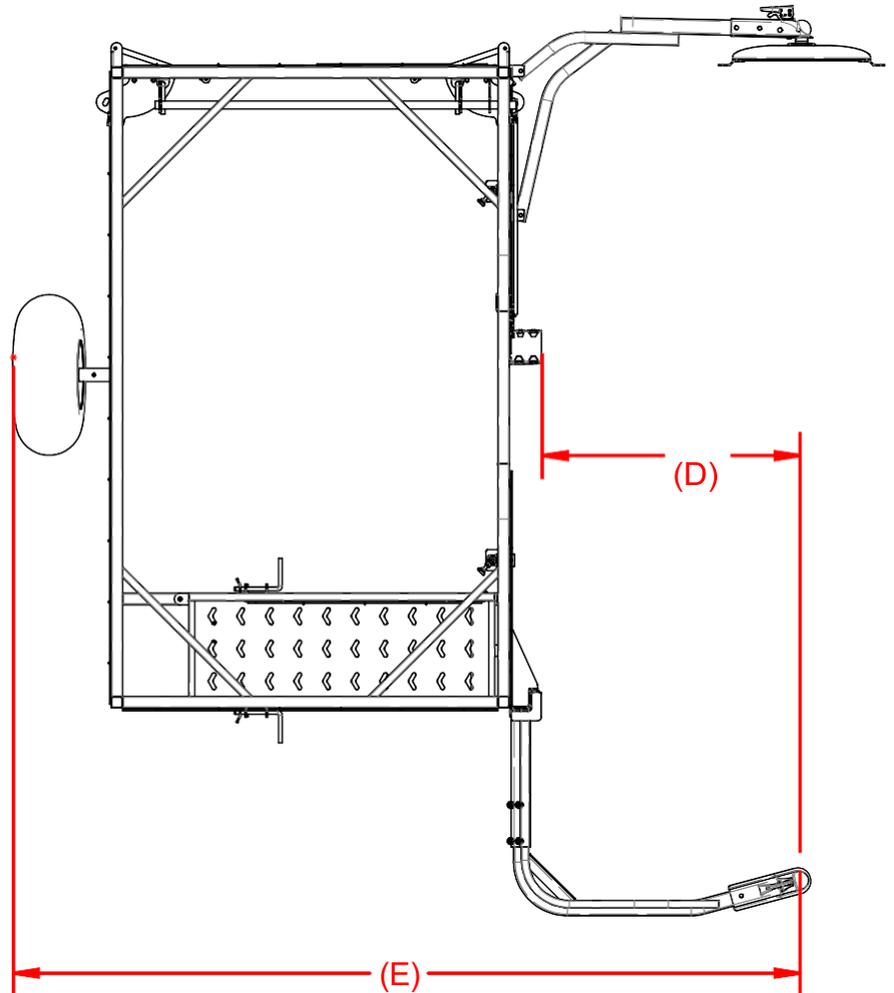

Head Office: Box 1310, 1 Limestone Drive, Stonewall, Manitoba, Canada, R0C 2Z0

US Office: 2700 Alliance Drive, Waterford, MI 48328

Ph: (204) 467-4470 | Fx: 1-855-483-2953 | Tf: 1-866-443-7444

LakelandFarmandRanch.com